


BASS CONTROL LAYOUT

44-01/55-01

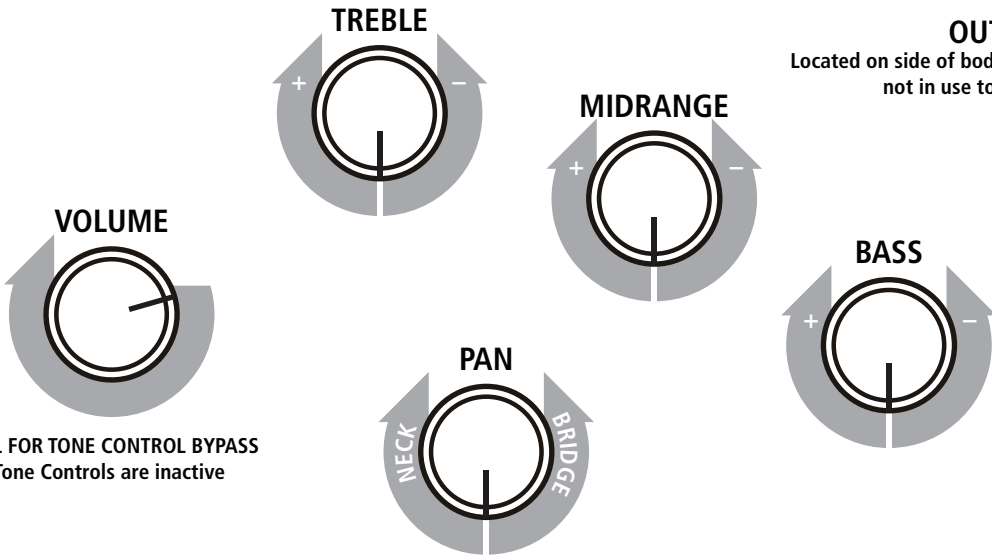

OUTPUT JACK
Located on side of body. Disconnect patch cord when not in use to maximize battery life.

